# GASGUARD CO

Carbon Monoxide Sensor



## **OPERATING & INSTALLATION MANUAL**



## Warning

Use this product only in the manner described in this manual. If the equipment is used in a manner not specified by Calibration Technologies, the protection provided by the equipment may be impaired.

This equipment should be installed by qualified personnel.



## **Table of Contents**

General description	4
Installation	4
Locating the sensor	4
Installation guidelines	5
Wiring	
Operation	
Start-up	7
Calibration	
Maintenance	9
Specifications	10
Warranty	11
•	

For technical support, contact:

## Calibration Technologies

920 N Trade Winds Pkwy Columbia, MO 65201

866-394-5861

<u>sales@CTlengineering.com</u> <u>www.CTlengineering.com</u>

## **General Description**

The GasGuard CO sensor is a +24 VDC, three-wire, 4/20 mA sensor for carbon monoxide which utilizes proven electrochemical sensor technology for fast and accurate detection. The standard detection range of the GasGuard CO provides real-time continuous monitoring of carbon monoxide concentrations accurately down to 10 ppm without false alarms. The upper detection limit is 200 ppm.

The GasGuard CO provides an industry standard linear 4/20 mA output signal compatible with most gas detection systems and PLCs. The output signal is not affected by drastic temperature and moisture variations, or by other atmospheric variations.

The transmitter circuit board is sealed in potting compound, protecting sensitive electronic components and copper tracing from corrosion. The specially vented chemical-resistant polycarbonate enclosure protects the sensor from accidental damage, weather and direct hose-hits from clean-up crews.

## Installation

#### Locating the sensor

One of the most important considerations when installing GasGuard CO sensors is that they must be easily accessible for calibration and maintenance.

Always install the sensor in the breathing zone, approximately 5' off of the floor. This mounting location will provide the best personnel protection.

As a general rule of thumb, install sensors no further than 30' from carbon monoxide sources.

#### Caution: Remove protective cap.

The sensor is shipped with a cap installed over the electrochemical cell to preserve cell life. The cell will not detect carbon monoxide gas with this cap installed. Remove cap and discard during installation.

#### Installation Guidelines:

- Remove and discard protective cell cap
- Always mount the sensor vertically.
- Must be easily accessible for calibration and maintenance
- Mount the sensor close to the potential leak source.
- For optimum personnel protection, mount sensor in breathing zone (4' 6' off of floor).
- Take air movement and ventilation patterns into account.
- To prevent electrical interference, keep sensor and wire runs away from mercury vapor lights, variable speed drives, and radio repeaters.
- Protect sensor from physical damage(forklifts, etc.).
- If mounting on a wall with studs, the mounting screws should be screwed into the studs.
- Never mount the sensor in CA (controlled atmosphere) rooms because normal atmospheric levels of oxygen are required for operation.
- For highly critical locations more than one sensor should be installed in each room.
- Mount sensor enclosures through the mounting holes as shown in Figure 1. Use the supplied selftapping screws for mounting on sheet metal surfaces.



Figure 1: Mounting dimensions

#### Wiring

Electrical wiring must comply with all applicable codes.

**Electrical Power:** 24 VDC regulated, 350 mA. **Output:** Linear 4/20 mA output. Monitoring equipment may have a maximum input impedance of 700 ohms.

Cable Recommendation: 20/3 shielded cable (General Cable C2525A or equivalent). Length of cable to sensor should be no greater than 1.500 feet.

**Monitoring:** Monitoring equipment must be configured to indicate a fault if the signal is below 1 mA. All signals over 20 mA must be considered high gas

concentrations. Alarm setpoints should not be lower than 10% of full-scale range.

## Wiring Guidelines:

- Always use 3-conductor, insulated, stranded, shielded copper cable.
- Do not pull sensor wiring with AC power cables. This can cause electrical interference.
- If cable runs cannot be made without a splice, all splice connections should be soldered.
- Ground the shield at the main control panel.
  Connect the shield wire in the sensor terminal block labeled SHLD.
- Always disconnect power at the controller before performing any wiring at the sensor.
- To maintain NEMA/IP rating of the enclosure, conduit fittings of the same rating or better must be used.



Figure 2: Wiring diagram

## **Operation**

#### Start-up

Before applying power, make a final check of all wiring for continuity, shorts, grounds, etc. It is usually best to disconnect external alarms and other equipment from the sensor until the initial start-up procedures are completed.

After power-up, allow at least 1 hour for the system to stabilize before testing the sensors. Because sensors are normally located at a distance from the main unit, the test time required and accuracy of the response checks will be improved if two people perform the start-up procedures and use radio contact.

#### Start-Up Test:

- One person exposes each sensor to carbon monoxide test gas.
- The second person stays at the control unit to determine that each sensor, when exposed to the gas, is connected to the proper input and responds, causing appropriate alarm functions.

#### Calibration

The GasGuard CO Sensor comes factory calibrated and should require only minimal adjustments after installation. There are two pots on the preamp that are used for calibration. Span calibration can be performed within an hour after power-up, although best to wait 12 hours before adjusting the zero pot.

Note: Never measure sensor output in mA. Always use mVDC or VDC voltmeter settings.

**Zero Calibration:** The unit can be zero calibrated by the following:

- Be sure the unit is in clean air. If unsure, apply Zero Air gas at 0.5 to 1.0 L/min.
- Adjust the zero pot until the sensor outputs 40 mV from Test [-] to Test [+] (see Figure 3).

**Span Calibration:** The unit is factory calibrated and normally does not need to be spanned upon initial installation. If span adjustment is required, the following procedure will span the unit:

- Perform zero adjustment before spanning.
- Apply span gas at 0.5 to 0.8 L/min (span gas must be in air, not nitrogen or other carrier).
- Sensor should react to gas within 10 seconds
- Once the output signal has peaked (or two minutes maximum) adjust the span pot until the correct output is achieved (see Figure 3).

Note: Below are a few response characteristics which may be an indication that the gas sensor is at or near the end of its useful life. If any of these are observed, the cell should be replaced:

- Slow response to / recovery from calibration gas.
- Failure of the output to reach 50% of the calibration gas value prior to span adjustment.
- Unable to achieve correct output during span adjustment.

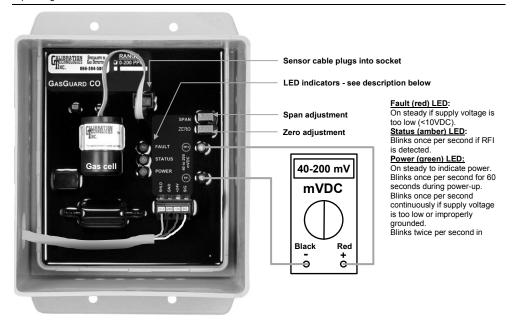


Figure 3: Sensor board components and zero/span adjustments

#### **Maintenance**

The GasGuard CO was designed for long life and minimal maintenance. For proper operation it is essential that the test and calibration schedule be adhered to. Calibration Technologies recommends the following maintenance schedule

#### Maintenance Guidelines:

- The sensor is shipped with a factory calibration.
  Sensor should be calibrated 6 months from purchase date.
- Calibrate the detector at least once every 6 months.
- Calibration should be performed with certified calibration gas. Calibration kits and replacement cylinders are available from Calibration Technologies.
- In highly critical areas, a response test should be performed between calibrations to verify proper sensor response and alarm functions. This can be done with calibration gas. The response test is not required if multiple electrochemical sensors are installed in the same room.
- · All tests and calibrations must be logged.
- Always disconnect power at the controller before performing any wiring at the sensor.

**Sensor Life:** These electrochemical cells are extremely reliable, but several things can cause the cell chemicals to become depleted including:

- · a period of time
- · exposure to high temperatures
- · continuous, long term exposure to carbon monoxide

When the cell becomes depleted, the unit will give no indication of failure other than that the sensor will not respond. For this reason it is absolutely essential that these sensors be calibrated on a regular basis. Typical cell life in most applications is 5 years. When the cell becomes depleted, a replacement cell can be obtained from Calibration Technologies. Simply unplug the cell's ribbon cable from the transmitter, pull the old cell from the spring clip, discard the old cell and replace it with a new one. The sensor can be calibrated after a 12 hour warm-up period.

### **Specifications**

Input Power: +24 VDC, 350 mA **Detection Principle:** Electrochemical

**Detection Method:** Diffusion

Gases:

Carbon Monoxide (CO) Range:

0-200 ppm **Output Signal:** 

Linear 4/20 mA (max input impedance: 700 Ohms)

Response Time:

 $T_{50}$  = less than 30 seconds  $T_{90}$  = less than 60 seconds

Accuracy:

+/- 5% of value, but dependent on calibration gas accuracy and time since last calibration

Zero Drift: Less than 0.1% of full-scale per month, noncumulative

Span Drift: Application dependent, but generally less

than 2% per month

Linearity: +/- 0.5% of full-scale Repeatability: +/- 1% of full-scale

Wiring Connections: 3-conductor, shielded, stranded. ≥ 20 AWG cable (General Cable C2525A or equivalent)

up to 1500 ft. Terminal Block Plug (Field Wiring): 26-12 AWG,

torque 4.5 lbs-in.

Power (green) LED: Blinks once per second for 60 seconds during power-up. If supply voltage is too low (<10VDC) or improperly grounded, will blink once per second continuously. Stavs on steady to indicate power. Blinks twice per second in calibration mode (10 minute timeout delay).

Status (amber) LED: Blinks once per second if RFI (radio frequency interference) is detected.

Fault (red) LED: Stays on steady if supply voltage is too low (<10VDC).

Enclosure: Injection-molded, NEMA 12 Washdown-Duty, polycarbonate sensor housing with hinged lid and captive screw. For non-classified areas. Optional 18 GA. NEMA 3RX Washdown-Duty stainless steel enclosure with hinged lid and captive screw. For nonclassified areas

Temperature Range:

-20°F to +120°F (-29°C to +49°C)

Humidity Range: 5% to 100% condensing **Dimensions:** 7.7" high x 6.7" wide x 3.8" deep

Weight: 3 lbs. Certification:

FTI Listed: Conforms to UI 61010-1

Certified to CSA C22.2 No. 61010-1

#### Limited Warranty & Limitation of Liability

Calibration Technologies, Inc. (CTI) warrants this product to be free from defects in material and workmanship under normal use and service for a period of two years (including cell), beginning on the date of shipment to the buyer. This warranty extends only to the sale of new and unused products to the original buyer. CTI's warranty obligation is limited, at CTI's option, to refund of the purchase price, repair, or replacement of a defective product that is returned to a CTI authorized service center within the warranty period. In no event shall CTI's liability hereunder exceed the purchase price actually paid by the buyer for the Product.

This warranty does not include:

- a) routine replacement of parts due to the normal wear and tear of the product arising from use;
- b) any product which in CTI's opinion, has been misused, altered, neglected or damaged by accident or abnormal conditions of operation, handling or use;
- any damage or defects attributable to repair of the product by any person other than an authorized dealer or contractor, or the installation of unapproved parts on the product

The obligations set forth in this warranty are conditional on:

- a) proper storage, installation, calibration, use, maintenance and compliance with the product manual instructions and any other applicable recommendations of CTI;
- b) the buyer promptly notifying CTI of any defect and, if required, promptly making the product available for correction. No goods shall be returned to CTI until receipt by the buyer of shipping instructions from CTI; and
- c) the right of CTI to require that the buyer provide proof of purchase such as the original invoice, bill of sale or packing slip to establish that the product is within the warranty period.

THE BUYER AGREES THAT THIS WARRANTY IS THE BUYER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. CTI SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, INCLUDING LOSS OF DATA, WHETHER ARISING FROM BREACH OF WARRANTY OR BASED ON CONTRACT, TORT OR RELIANCE OR ANY OTHER THEORY.



GG-CO 20151119

CALIBRATION SPECIALISTS IN GAS DETECTION